


Directions and Suggestions for the Use of

REGULAR AND POCKET TYPES


Waterman's Ideal Fountain Pen

The pen with the Clip-Cap

The five simple parts of the Regular and Pocket Types of Waterman's Ideals, as illustrated below, each pass careful inspection and are guaranteed perfect when sold.

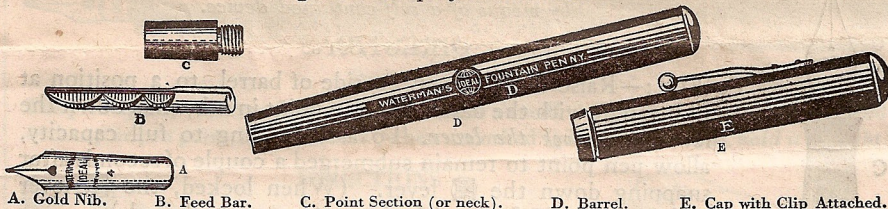

DIRECTIONS FOR THE CARE OF A PEN

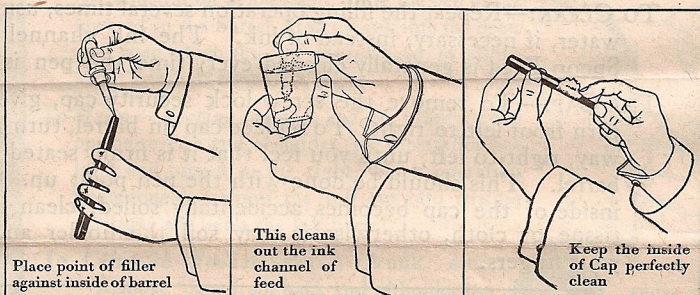

To Fill the Pen: Remove cap, unscrew point section (C), and, by the use of a dropper, fill the barrel nearly full with ink. Dry off the end of barrel and threads, if moist, then screw the two parts firmly together, thus insuring a tight, dry joint. If the feed has been allowed to dry out through non-use, the ink will flow correctly as soon as the fissures become moist. If the point section does not unscrew readily, an elastic band wound around it will provide an effective grip. (Or use Ideal Openers, 10c.)

To Clean the Pen: After unscrewing, hold the point section with pen downwards under running cold water; or fit the rubber bulb from the filler, over the screw threads and force water in and out through the feed. The barrel can be rinsed out repeatedly until it is clean. Hot water should not be used, as it destroys the polish of the rubber. A drop or two of ammonia used occasionally will cleanse it thoroughly. (Our Ideal Rubber Cleaners retail at 15c each.)

The Cap, on REGULAR TYPE, should be removed from, or replaced on, the barrel with a slight twist from right to left. This should be done with the pen point held upwards. The twist locks and unlocks the cap by friction. Permits easy removal and avoids suction. On POCKET TYPE, remove cap by a short turn from left to right; replace cap by a reverse turn until you feel that it is firmly seated on the barrel. If the inside of the cap becomes accidentally soiled, clean it with tissue or blotting paper, otherwise it may soil the holder and then your fingers.

Waterman's Ideals of the Pocket Type are fitted with the Screw-Lock Security Cap as illustrated here. This cap has an inner compartment which is both air and ink tight. When the pen is not in use, and the



cap screwed on, the gold pen and feed are incased in this compartment. It prevents the accidental escape of ink, and the pen from sweating.

For Clip-on-Cap prices see page 4

Suggestions for Use: Waterman's Ideals of the Regular Type should be carried with the pen point up. In this type, *open the vent holes in the cap* if the pen is to be carried in the pocket, otherwise the warmth of the body may cause moisture to accumulate inside the cap. *Close the vent holes* with wax if the pen is to be left lying on the desk, otherwise the ink in the feed will dry up and the pen will not write readily.

Repair Suggestions on Last Page of This Circular

If your Waterman's Ideal does not suit you perfectly, it will be exchanged by any agent, or at any of the addresses below, until entirely satisfactory.

L. E. Waterman Company, 191 Broadway, New York, U. S. A.

24 School St., Boston
179 St. James St., Montreal

115 So. Clark St., Chicago
Kingsway, London

17 Stockton St., San Francisco
6 Rue Monsigny (2E), Paris

Complete Regular Pen Ready to Write

Complete Pocket Pen Ready to Write




Directions and Suggestions for the Use of

SELF-FILLING TYPE

Waterman's  Fountain Pen




This style pen is made to fill direct from any ink supply, by means of a self-contained device.

DIRECTIONS


TO FILL:—Raise the  lever, on side of barrel, to a position at right angle with the barrel, dip pen point in ink, snap down the lever, then *lock the lever*. To assure filling to full capacity, allow pen point to remain submerged a couple of seconds after snapping down the  lever. (When locked, the  lever will be perfectly flush with the surface of the barrel.)

 
TO CLEAN:—Repeat the filling operation several times, using cold water, if necessary, instead of ink. The ink channel in the Spoon Feed is generally cleaned every time the pen is filled.

THE CAP:—To remove the screw-lock security cap, give short turn from left to right. To replace cap on barrel, turn reverse way, right to left, until you feel that it is firmly seated on the barrel. This should be done with the pen point up. If the inside of the cap becomes accidentally soiled, clean it with tissue or cloth, otherwise it may soil the holder and then your fingers.

When you raise the  lever you empty the ink tube.
 When you lower the  lever you fill the ink tube.
 When you press down the  lever you lock the ink tube.

CAUTION


Do not raise the  lever when there is any ink in the tube, unless the pen point is held over the ink bottle.

This pen has all the superior qualities and patented parts of the Regular Type of Waterman's Ideals, in addition to being so made that it can readily be filled by the convenient  lever in less time than it takes to tell about it.

INK

Any good fluid writing ink may be used, but preferably from a corked bottle, avoiding dusty, gummy or muddy ink, which will clog the feed and necessitate frequent washings. We strongly recommend Waterman's Ideal Ink for use in this or any pen. It is uniform in quality, will not thicken or dry up, and is everlasting in its record qualities. For sale by your dealer.



 lever raised ready to submerge point in ink, then lever is snapped down and pen is filled

For Clip-on-Cap prices see page 4

L. E. Waterman Company, 191 Broadway, New York, U. S. A.

24 School St., Boston


115 So. Clark St., Chicago

17 Stockton St., San Francisco

179 St. James St., Montreal

Kingsway, London

6 Rue Monsigny (2E), Paris

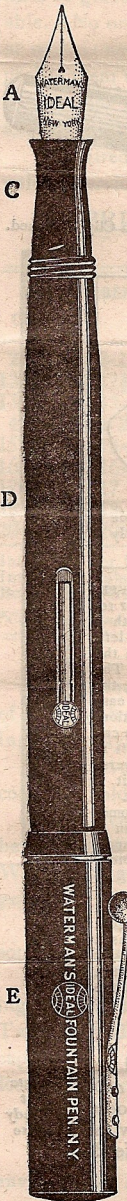

Directions and Suggestions for the Use of

SAFETY TYPE

Waterman's Ideal Fountain Pen



Showing pen ready to write

The principle of this type fountain pen is that of a small vial containing ink; when corked with cap or pen point, it cannot leak; when uncorked (gold pen lowered), *hold it upright*.

DIRECTIONS

To Fill:—*Holding the pen upright* screw off the cap (see illustration below) and while the pen nib is lowered in the barrel, drop the ink into the open end, from which the cap was removed, to within about one-half inch from top.

To Write:—*Keeping the open end up*, place the cap on the reverse end of holder (see illustration below) and turn it to the right, which operation immediately conveys the nib out into writing position, and seals the ink barrel.

To Carry in Pocket, Purse, Trunk, etc.:
—Remove cap from back end of holder by turning to the left, thus drawing the pen nib back, automatically, into the barrel, allowing cap to again be screwed on to the open pen end and to hermetically seal the barrel. Be sure gold pen is lowered clear of top edge of barrel before screwing on the cap.

To Clean:—Remove cap and before screwing the pen out of the barrel permit running cold water to flow into the holder until thoroughly clean. Do not take the pen apart.

Screw the cap on firmly and not the smallest particle of ink can escape, no matter whether carried upside down, right side up, sideways or endways.

The gold nib, when not in use, is harbored right in the ink in the barrel; hence, being moist when turned out into position, is always ready to write at the very first stroke, and being fitted with the "Spoon Feed" will continue writing, without overflow, until the last drop of ink has been used.


Any good fluid ink may be used, but we strongly recommend Waterman's Ideal Ink for use in fountain pens. It is uniform in quality, will not thicken and dry up, is non-corrosive and everlasting in its record qualities. For sale by your dealer.

Repair Suggestions on Last Page of This Circular



Transparent view showing how pen is sealed when closed

Screwing nib into writing position

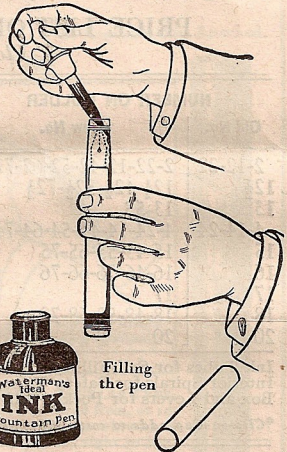

Filling the pen



Screwing off the cap

REPAIR DEPARTMENT

Our Repair Department is maintained for the convenience and satisfaction of our customers. Careful attention is given to the supplying and careful fitting of lost or broken parts of Waterman's Ideals. All correspondence is promptly answered.

In order that the good reputation of Waterman's Ideals may be lastingly maintained, we desire that all dealers who sell them, as well as all users, should send them to us for repairs. This is advisable when the attention is required to either the gold pens or holders. Our expert service is necessary on every part to insure its greatest satisfaction. No one can have so great an interest as ourselves in making all repaired pens satisfactory and serviceable. No one else can be expected to have as good a knowledge of Waterman's Ideals, or what is necessary to put them in good writing condition, as those who manufacture and perfect them to the degree that they can be fully guaranteed, and command the reputation of being the best fountain pens made. If others offer to repair Waterman's Ideals at different prices, you can be reasonably certain that the service will not be as well rendered.

Repaired holders may show the effects of wear and use, but may be fitted to give good writing service in all respects.

PRICE LIST OF SEPARATE PARTS FOR ALL TYPES

Plain, Chased, Cardinal or Mottled

NUMBER ON HOLDER		GOLD PENS		Feed Bar	Point Section	Barrel	Cap With-out Clip *	Pressure Bars
Old No.	New No.	Price on New	Allowance on Old					
2-12-22	2-22-12-42-52-62-72	\$1.25	\$.20	\$.75	\$.75	\$.75	\$.25	\$.30
12½	12½-42½-52½-72½	1.25	.20	.75	.75	.75	.25	.30
13	13-53	1.50	.30	.75	.75	.75	.25	.30
4-14-24	4-24-14-44-54-64-74	1.75	.40	.75	.75	1.00	.25	.30
15	15-45-55-65-75	2.25	.50	.75	.75	1.25	.30	.30
16	16-46-56-66-76	2.75	.60	.75	.75	1.50	.40	.30
17	17	3.25	.70	.75	1.00	2.00	.50	
18	18-48-58-68-78	3.75	.80	1.00	1.00	2.00	.50	.30
20	20	4.75	1.00	1.25	1.25	2.25	.75	

Ink Tubes for Self-Filling Types, all sizes. 15c
 Interior Spirals for Safety Type, all sizes. 75c
 Box and Levers for Pocket Self-Filling Type, all sizes. 30c

*Clip-on-Cap adds to cost of Cap or Complete Pen. Regular 25c, Sterling Silver 50c, Rolled Gold \$1.00, Solid Gold \$2.00

Numbers are stamped on the butt end of every holder

The above prices on gold pens, feed bars and point sections apply also to these parts of all mounted styles; the gold and silver mounted barrels and caps cost additional, according to the style of mounting.

Whenever a new gold pen is wanted, or any readjustment of parts is necessary, the complete holder must be sent to us; otherwise satisfactory service cannot be given.

Gold pens are re-pointed or straightened for 50 cents each. Re-pointed pens cannot be warranted to wear well, nor to have same quality of point or flexibility as new pens. We do not guarantee re-pointed pens. Pens smaller than No. 5 are seldom worth re-pointing.

Gold pens which have been straightened but retain their original iridium points sometimes write as well as ever, but they are usually softer and cannot be guaranteed.

New caps for Cone Cap Holders (12-18) can be supplied on mail order without sending the holder. In fitting shoulder necks, however (Straight Holders, No. 2 and No. 4; Taper Cap Holders, No. 22 and No. 24), we require that the holders be sent to us to have caps properly fitted. In ordering state whether Plain Black, Chased Black or Mottled Red and Black is wanted, so as to match the cap to the barrel of the pen.

SPECIAL DIRECTIONS

Before sending pens in for repairs, empty the ink from the barrel, mark on the repair envelope the attention you wish given, and, if a letter containing special instructions is sent under separate cover, mark repair envelope to that effect, so that upon receipt of the repair, it can be connected with your letter.

Your name and address as sender must be placed on all packages.

Waterman's Ideal Ink is absolutely the best for all kinds of writing