

## DIRECTIONS

**FOR KEEPING YOUR "WEAREVER" FOUNTAIN PEN IN PERFECT WRITING CONDITION**

**TO FILL**—First, raise lever to a horizontal position. Completely submerge pen point in the ink. Then snap lever back to its original position. Leave pen in ink for fifteen seconds. This will assure filling ink sac to its maximum capacity. After fifteen seconds, withdraw the pen and it will be ready for use.

**TO CLEAN**—Do exactly the same as when filling using cold water instead of ink. A pen should be cleaned every month to insure good writing.

**CAUTION**—The lever should not be raised unless pen is held over ink stand. Never remove the ink sac from holder as it will damage the sac.

**NOTE**—When ink flows too freely the pen requires refilling. When the pen is not in use, always keep the cap tightly screwed over the pen point. This will definitely keep the pen from leaking.

**DAVID KAHN, Inc.**

NORTH BERGEN, N. J.

"Since 1890 . . . The World's Finest Popular Priced Writing Instruments"

Made in U.S.A.



\* *Zenith* FOUNTAIN  
PEN

Guarantee

● This Guarantee covers the replacement, free of charge, of any part of the pen which shows a defect in construction, workmanship or material.

We also guarantee to maintain in perfect working condition any WEAREVER ZENITH FOUNTAIN PEN sent to us, free of charge, except for a 25c postage and handling charge.

Any part broken by accident or ill usage will be replaced at prevailing parts prices, plus a 25c charge for handling and postage.

The Wearever Fountain Pen is a precision instrument and must never be taken apart.

★ Reg. U. S. Pat. Off.